



D5-Evo/D10 synchronisation diagram

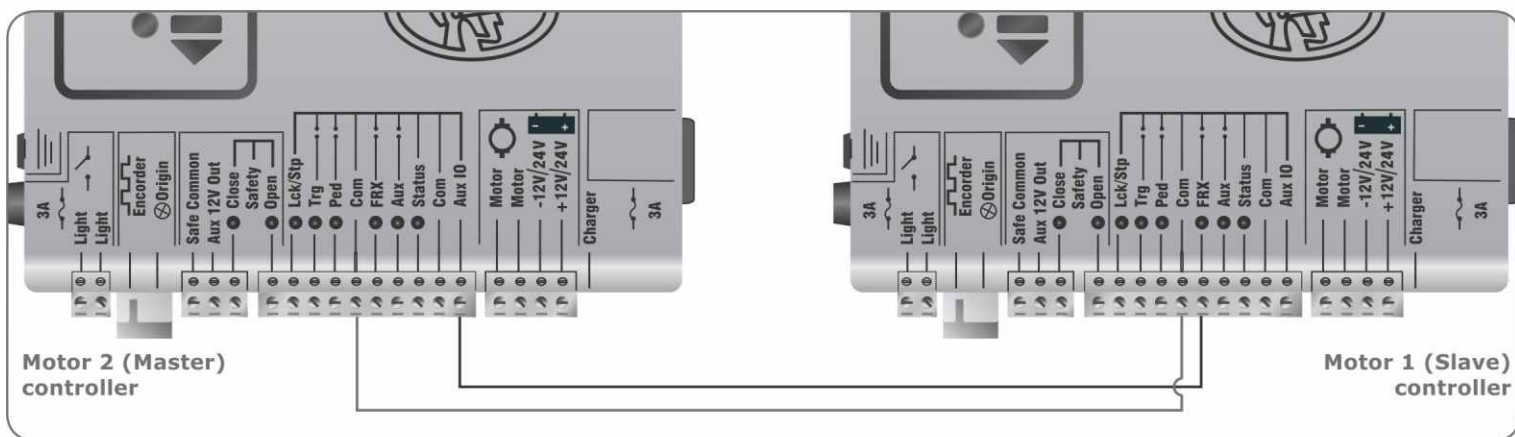

Two synchronised gates opening

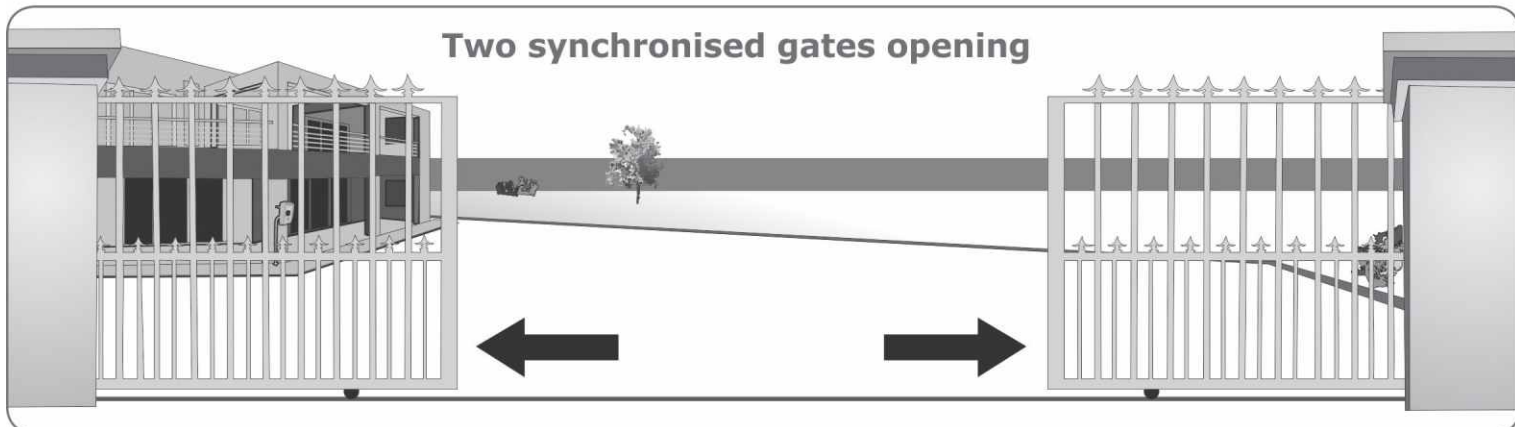

Master controller settings



Safety

External gate indication status.....	Indicator output.....	AUX IO
	Closed indication.....	Off
	Part close indication.....	Off
	Closing indication.....	Off
	Part open indication.....	Off
	Opening indication.....	On
	Open indication.....	On
	Pedestrian indication.....	Off
	Unknown indication.....	Off

Slave controller settings



Autoclose

Autoclose status.....	On
Autoclose timer.....	0 seconds



- Remote controls need to be programmed in Master controller receiver
- If the pedestrian function is required, either connect the receiver's Normally-Open output to the PED terminal on the Slave controller or learn the remote to activate the PED function on the Slave controller receiver