









VECTOR2 Installation Checklist

Critical points to remember during the VECTOR2 installation

-  Ensure that the wall bracket is securely anchored
-  Make sure that the actuator's maximum stroke is being utilised
-  Only use **VECTOR** cable for the installation
-  Leave a 350mm loop in the cable (Refer to page 35 of the installation manual)
-  Fit an electromechanical or an electromagnetic gate lock if the leaf width is greater than three metres
-  Ensure that the opening and closing angles conform to the installation guidelines

Ensure that your gate and operator are equipped to deal with wind loading (Refer to the table on page 34 of the installation manual)

